DENON

V18426

STEREO CD PLAYER

DCM-360/260

OPERATING INSTRUCTIONS
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
ISTRUZIONI PER L'USO
INSTRUCCIONES DE OPERACION
GEBRUIKSAANWIJZING
BRUKSANVISNING
INSTRUÇÕES DE OPERAÇÃO

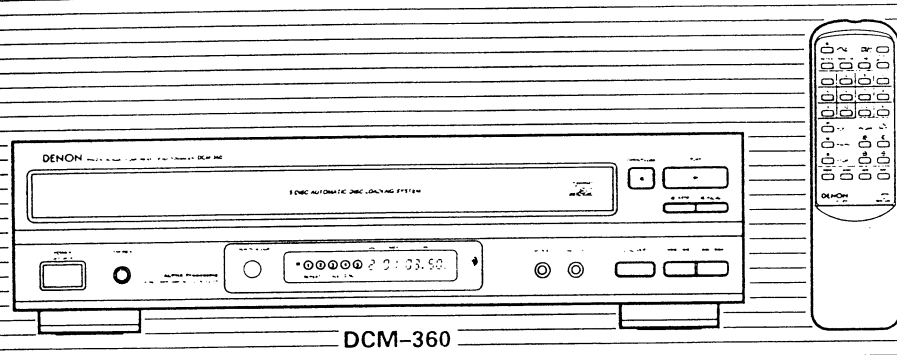

DCM-360

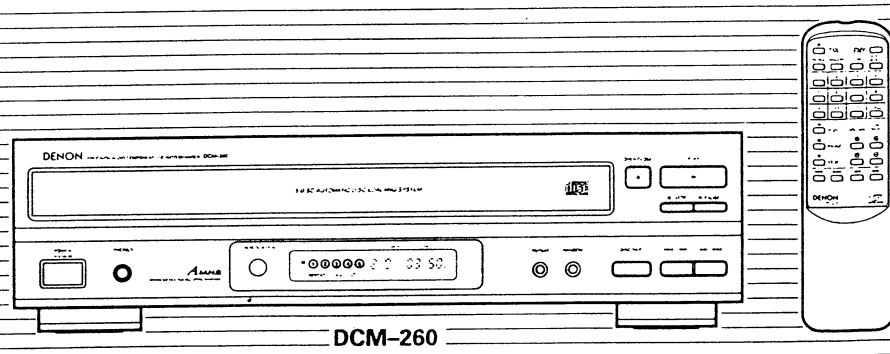

DCM-260

FOR ENGLISH READERS	PAGE	5	~ PAGE	15	PARA LECTORES DE ESPAÑOL	PAGINA	44 ~ PAGINA 49
FÜR DEUTSCHE LESER	SEITE	16	~ SEITE	26	VOOR NEDERLANDSTALIGE LEZERS	PAGINA	50 ~ PAGINA 55
POUR LES LECTEURS FRANCAIS	PAGEE	27	~ PAGE	37	FÖR SVENSKA LÄSARE	SIDA	56 ~ SIDA 61
PER IL LETTORE ITALIANO	PAGINA	38	~ PAGINA	43	PARA LEITORES PORTUGUESES	PÁGINA	62 ~ PÁGINA 67

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

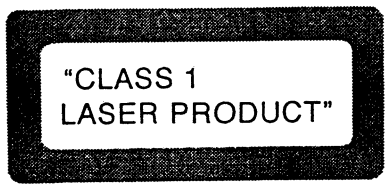

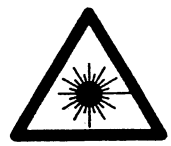

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSAETTELSE FOR STRÅLING.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING– OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

Please, record and retain the Model name and serial number of your set shown on the rating label.
Model No. DCM-360/260 Serial No. _____

CAUTION:

Whenever the power switch is in the STANDBY position, the unit is still connected on AC line voltage.
Please be sure to unplug the cord when you leave home for, say, a vacation.

VORSICHT:

Auch wenn der Netzschalter auf "STANDBY" steht, bleibt das Gerät an den Wechselstromkreis angeschlossen.
Wenn Sie z. B. auf Urlaub gehen, achten Sie bitte darauf, daß das Netzkabel gezogen wird.

PRECAUTION:

Quand l'interrupteur d'alimentation est en mode de veille (STANDBY), l'appareil est encore connecté à la tension de ligne secteur.
Prière de s'assurer de débrancher le cordon en quittant la maison par exemple lors du départ en vacances.

PRECAUZIONI:

Quando è stato attivato il modo di attesa accensione (STANDBY), l'apparecchio rimane collegato alla linea CA.
Assicuratevi di disinnestare il cavo quando lasciate casa per lunghi periodi di tempo, ad esempio per le vacanze.

PRECAUCION:

Cuando el interruptor de alimentación se encuentre en condición de espera (STANDBY), el equipo seguirá conectado a la línea de alimentación de CA.
Asegúrese de desenchufar el cable de alimentación cuando deje su hogar por un peró0odo prolongado.

WAARSCHUWING:

Wanneer de spanningstoets zich in de STANDBY-positie bevindt, is het toestel nog steeds aangesloten op de wisselstroomspanning.
Trek daarom het snoer eruit, als u bijvoorbeeld met vakantie gaat.

OBSERVERA:

Apparaten är fortfarande ansluten till nätet fastän strömbrytaren ställs i läget STANDBY.
Dra ut stickkontakten un el-uttaget för att helt bryta strömtillförseln till apparaten.

PRECAUÇÃO:

Quando quer que o interruptor de corrente esteja no estado de a aguardar (STANDBY), o aparelho ainda se encontra ligado à voltagem de circuito AC.
Por favor, certifique-se de que desliga a tomada do cabo de corrente quando abandonar a sua casa para, digamos, umas férias.

- **DECLARATION OF CONFORMITY**
  We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:
  EN55013, EN55020, EN60555-2 and EN60555-3.

- **ÜBEREINSTIMMUNGSERKLÄRUNG**
  Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:
  EN55013, EN55020, EN60555-2 und EN60555-3.

- **DECLARATION DE CONFORMITE**
  Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:
  EN55013, EN55020, EN60555-2 et EN60555-3.

- **DICHIARAZIONE DI CONFORMITÀ**
  Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:
  EN55013, EN55020, EN60555-2 e EN60555-3.

- **DECLARACIÓN DE CONFORMIDAD**
  Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración está conforme con los siguientes estándares:
  EN55013, EN55020, EN60555-2 y EN60555-3.

- **EENVORMIGHEIDSVERKLARING**
  Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:
  EN55013, EN55020, EN60555-2 en EN60555-3.

- **ÖVERENSSTÄMMELSESINTYG**
  Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:
  EN55013, EN55020, EN60555-2 och EN60555-3.

- **DECLARAÇÃO DE CONFORMIDADE**
  Declaramos sob nossa exclusiva responsabilidade que este produto, ao qual esta declaração corresponde, eatá em conformidade com as seguintes normas:
  EN55013, EN55020, EN60555-2 e EN60555-3.

Thank you for purchasing the DENON compact disc player. Read the Operating Instructions thoroughly, and operate this player properly.

— TABLE OF CONTENTS —

FEATURES 5
CAUTIONS DURING USE 5
NAMES OF PARTS AND THEIR FUNCTIONS 6, 7
OPENING AND CLOSING THE DRAWER AND LOADING A DISC 7
CONNECTIONS 8
NORMAL PLAY 8, 9
OTHER PLAY METHODS ..... 9~12
INSTALLATION PRECAUTIONS 13
PLAY USING THE REMOTE CONTROL UNIT 13, 14
COMPACT DISCS 15
TROUBLE? CHECK THE PLAYER TO FIND WHAT'S WRONG 15
SPECIFICATIONS 15

In addition to the CD Player unit, please check to make sure the following items are included in the packing box.

(1) Operating Instructions 1
(2) Connection Cords 1
(3) Remote Control Unit RC-258 1
(4) R6P (AA size) Dry batteries 2

NOTE:
This CD player uses the semiconductor laser. To allow you to enjoy music at a stable operation, it is recommended to use this in a room of 10°C (50°F) - 35°C (95°F).

FEATURES

The DCM-360 and DCM-260 are CD Players equipped with DENON's unique ALPHA Processor and A.M.N.S (Advanced Multilevel Noise Shaping) for eliminating sound quality deterioration in the PCM playback system in order to faithfully recreate the sound field of live halls or studios where compact discs are recorded. These models use carefully selected parts to provide high performance and sound field recreation with rich musical expression.

(1) ALPHA Processor (DCM-360)
The high speed interpolation operations of the newly developed ALPHA Processor reproduce the LSB (lowest significant bit) data lost from the disc upon recording to provide a smooth waveform. The audible effects of ALPHA Processing are particularly great during playback at low levels at the instant the sound fades out.

(2) A.M.N.S (Advanced Multilevel Noise Shaping) (DCM-260)
The use of DENON's unique system for preventing zero cross distortion, the main factor in loss of sound quality in the PCM playback section, plus multilevel noise shaping/$\Delta\Sigma$ D/A converters with superior resolution, offers reproduction of the original sound field with rich musical expression.

(3) High performance digital filter
The DCM-360/260 uses high precision 8-times oversampling digital filters.

(4) Simple Playback of 8cm CD Singles
8cm CD singles can be played without using an adaptor.

(5) Programming of up to 20 tracks
All of the tracks on a CD can be programmed to play in any order. Programming in units of discs (all tracks on a disc) is also possible.

(6) Newly developed carousel-type changer mechanism included
This mechanism can house five discs, and while one disc is playing the remaining four discs can be changed. In addition, the carousel can be rotated either clockwise or counterclockwise, so searching between discs is fast.

(7) Wireless Remote Control Accessory
In addition to general operations such as Play, Stop and Pause, this remote control unit enables direct selection, direct programming, and other functions. Use of the remote control unit adds greatly to the operating ease of the DCM-360/260, enhancing its outstanding features.

CAUTIONS DURING USE

- This compact disc player is capable of playing discs which have the mark at right.
- During track selection, during search and when the player sustains a strong impact, the disc's rotational speed changes greatly, causing a small noise to be emitted. This is not a malfunction of the player.
- If the CD player is operated while an FM or AM broadcast is being received, there may be noise in the FM or AM reception. Please switch the power to the CD player off at such times.
- The DCM-360/260 has a broad dynamic range. Please exercise caution when turning up the volume on the amplifier in cases when the playback volume is low. If the volume is turned up too high, it could damage the speakers.
- Do not use any discs but exclusive audio discs with this CD player.
- Placing this player or its connection cords near a TV or other audio device could cause a humming sound to be emitted. If this occurs, relocate the player or reroute the connection cords.
- Be sure to remove the disc from the player before moving it. The disc could be damaged if left in the player while it is being moved.
- Do not place any object in the tray in the position where the disc is loaded, or open and close the tray with anything inside. Foreign objects in the tray could damage the play mechanism.
- Do not move the player from a cold place to a warm place suddenly. If the player is cold when brought into a warm room, condensation could form, preventing proper operation of the player. If condensation does form on the player when it is brought into a warm room, wait at least 30 minutes before use.

NAMES OF PARTS AND THEIR FUNCTIONS

❶ Power Switch (POWER)
- Press this button to switch on the power.
- When the power is turned off, the unit is set to the standby mode.
  If the power is turned off during playback or while the disc information is displayed on the time display, several seconds after the power is turned back on, the number of the disc appears on the disc number display, the total number of tracks on that disc is displayed on the track number display, and the total time is displayed on the time display, and approximately 1 second later playback starts.

❷ Loading drawer
- Discs can be loaded and unloaded when this drawer is open. Do not force the drawer closed by hand.

❸ Open / Close Button (▲ OPEN / CLOSE)
- Press this button when opening.
- The drawer is opened toward the front.
- Press the button again to close the drawer.

❹ Play Button (▶ PLAY)
- Press this button to play a disc.
  The [▶] indicator lights up when the button is pressed, the number of the disc and the track being played is displayed by the Disc Number and Track No. indicator, and the amount of elapsed time for the current track is displayed by the Time indicator.
- The [▶] indicator goes off after playing of the final track of the final disc is finished and the player stops.

❺ Stop Button (■ STOP)
- Press this button to stop play.

❻ Pause Button (II PAUSE)
- Press this button to stop play temporarily.
- Pressing the Pause button during play stops play temporarily. The [▶] indicator goes off and the [II] indicator lights up
- To cancel the Pause state, press either the Play button ❹ or press the Pause button ❻ a second time.

❼ Disc trays (1 ~ 5)
- One disc per tray can be loaded.

❽ Disc skip button (DISC SKIP)
- Each time this button is pressed, the carousel will rotate in a clockwise direction to the next tray position. This allows for loading or unloading of discs.
  This button is also used to select the next disc, in the normal play continuously.

❾ Automatic / Manual Search Reverse Button (I◀◀ / ◀◀)
- Press this button to return the pickup to the beginning of the present track. Press again to return to other tracks.
- By pressing the button a number of times, the pickup will move back the corresponding number of tracks.
- Keep on pressing this button for more than 0.5 seconds during playback for fast reverse search. As long as the button is kept pressed, music signals are played back faster than normal.
- Keep on pressing this button for more than 0.5 seconds when the pause mode is engaged, you can quickly reverse the pickup to a desired position, three times faster compared to manual reverse search during playback. During this time, no sound is heard.

❿ Automatic / Manual Search Forward Button (▶▶ / ▶▶I)
- Press this button to move the pickup forward to the beginning of the next track. Press again to move ahead to other tracks.
- By pressing the button a number of times, the pickup will advance the corresponding number of tracks.
- Keep on pressing this button for more than 0.5 seconds during playback for fast forward search. As long as the button is kept pressed, music signals are played back faster than normal.
- Keep on pressing this button for more than 0.5 seconds when the pause mode is engaged, you can quickly forward the pickup to a desired position, three times faster compared to manual forward search during playback. During this time, no sound is heard.

⓫ Repeat Button (REPEAT)
- Press this button for repeated playback. The [REPEAT] indicator appears on the display. The following three types of repeat modes are available:
- When pressed once, the [REPEAT] and [1] indicators light and the track currently playing is repeated.
- When pressed again, the [REPEAT] and [1 DISC] indicators light and all the tracks on the disc currently playing are repeated.
- When pressed again, the [REPEAT] and [ALL DISC] indicators light and all the discs currently set on the tray are repeated
- When pressed again, the [REPEAT] and [ALL DISC] indicators turn off and the repeat mode is cancelled.
  The repeat function can also be used during programmed and random playback, but in this case only the all repeat ([ALL DISC] indicator) modes are available.
  (Refer to Page 11, item ❻.)

⓬ Random Button (RANDOM)
- Press this button to begin random play.
- Pressing this button during stop, and press play button to play to full automatic random play.
- Pressing this button during playing of a program starts random play of the tracks in the program.
  (See page 11, item ❼.)

⓭ Display Window
- The Disc No., Track No., playing time and other information are displayed in the display window.

DISPLAY

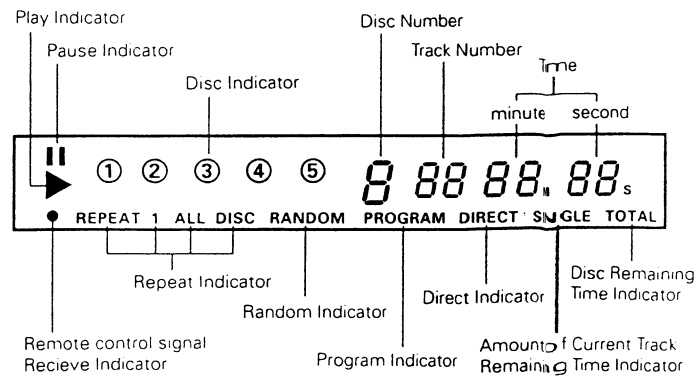

⑭ **Remote Control Receptor (REMOTE SENSOR)**
- This receptor receives infrared signals from the wireless remote control unit.
- Aim the wireless remote control unit at this receptor window when operating it.

⑮ **Headphone Jack (PHONES)**
- Insert the jack of the headphones when desiring to listen to a disc privately. (Headphones are sold separately.)

⑯ **Output Terminal**
- Connect the connection cords from these terminals to the amplifier's input terminals. (See page 8 for connections.)

Note:
- Do not stop the carousel by hand when it is turning. If this is done, the microprocessor erroneously determines the disc number and the disc can be damaged.

OPENING AND CLOSING THE DRAWER AND LOADING A DISC

Opening and closing the drawer (This operation only works while the power is on.)

1. Press the power switch (POWER) to turn on the power.
2. Press the open / close button (⏏ OPEN/CLOSE).

How to load a disc
- Make sure the drawer is completely open.
- Hold the disc by the edges and place it on the disc tray. (Do not touch the signal surface, i.e., the glossy side.)
- Set the disc properly in the tray according to its size.
  Set 8cm discs in the center hole.
  Set 12cm discs in the outer hole.
- When the drawer is opened during the stop mode, discs can be loaded in the disc 1 to disc 4 trays. If the DISC SKIP button is pressed, the carousel turns and a disc can be loaded in the disc 5 tray.
  When the drawer is opened during the play mode, it is possible to load and unload discs in all of the disc trays other than the one whose disc is currently playing. In this case, the DISC SKIP button will not operate.
- Press the open/close button (⏏ OPEN/CLOSE) to close the drawer.

Caution:
- The player will not operate properly and the disc may even be damaged if it is not set correctly.
- If your finger should get caught in the drawer when it closes, press the open/close button (⏏ OPEN/CLOSE).
- Do not place any foreign objects on the disc tray, and do not place more than one disc on the tray at a time. Otherwise malfunction may occur.
- Do not push in the disc tray manually when the power is off as this may cause malfunction and damage the CD player.
- Do not touch the carousel while it is turning. Also, do not turn the carousel by hand when it is stopped. Doing so could damage it.

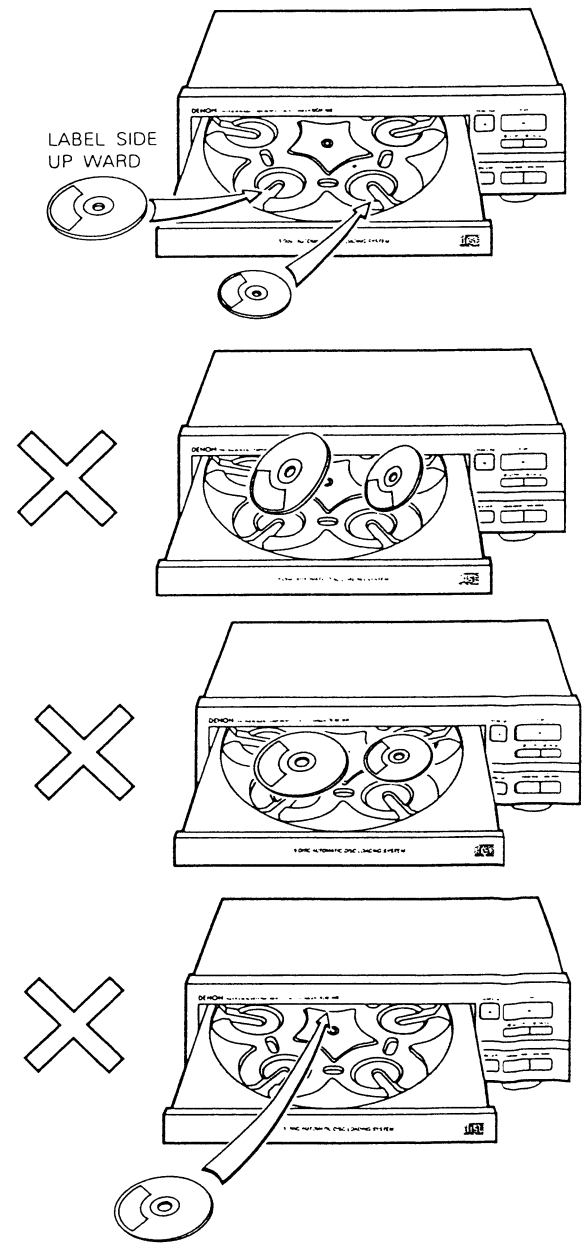

- Do not insert disc where indicated by arrow.
  This could damage the internal mechanism in the unit.

CONNECTIONS

Connecting the Output Terminal

- Connect one end of the connection cord supplied with the CD Player to the output terminals, left (L) and right (R) of the CD Player, and the other end to the CD, AUX or TAPE PLAY input terminals, left (L) and right (R), of the amplifier.

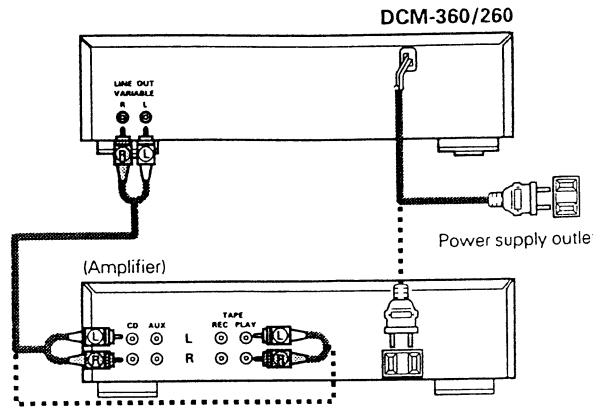

NORMAL PLAY

Follow the steps below to get an understanding of the disc play procedure.

(1) Starting Playback

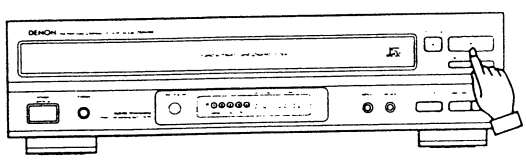

(▶ PLAY)

1. Turn the power switch on and press the open/close (≜ OPEN / CLOSE) button to open the drawer.
2. Set the disc to be played in the tray on left side.
3. Press the play button (▶).
4. The drawer closes and the disc just loaded is played.
5. The disc number, track number and elapsed time, etc., for the disc currently playing appear on the display window.
6. If the open/close (≜ OPEN/CLOSE) button is pressed while a disc is playing, playback continues, but the drawer opens and four discs can be replaced.
   Press the open/close (≜ OPEN/CLOSE) button again to close the drawer.

(2) Stopping Playback

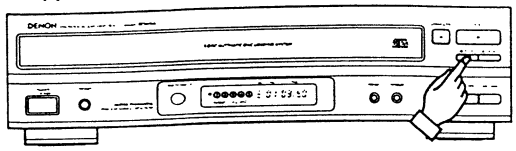

(■ STOP)

1. Press the stop button (■) to stop playback.
2. To replace discs, press the open / close (▲ OPEN/CLOSE) button. The disc which was playing switches over to the left side and the drawer opens.

- Set the disc you want to played in the left side.

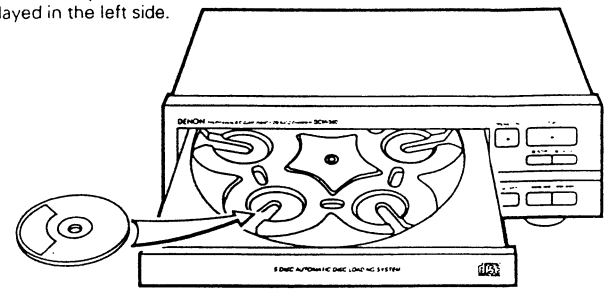

OTHER PLAY METHODS

In addition to normal play, the following methods can be used when playing a disc.

❶ To Play the Desired Disc and Desired Track ..... Direct Selection

(Remote control only)

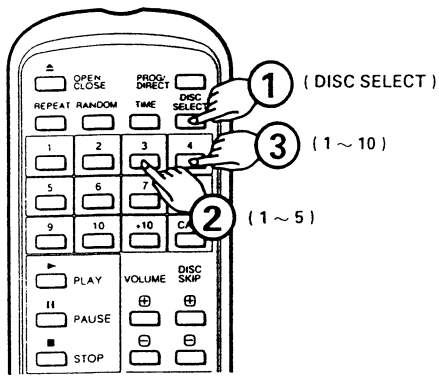

1. Press the DISC SELECT button.
2. Use the number buttons (1 to 5) to select the number of the disc to be played.
3. Next, use the number buttons (1 to 10 and +10) to select the number of the track to be played.

- For example, to play the 4th track on the 3rd disc:
  Press [DISC SELECT], [3] and [4].
  To play the 12th track on the 5th disc:
  Press [DISC SELECT], [5], [+10] and [2].
  Playback begins from the number of the disc and track selected

❷ To Move to the Next Disc During Playback ..... Disc Skip

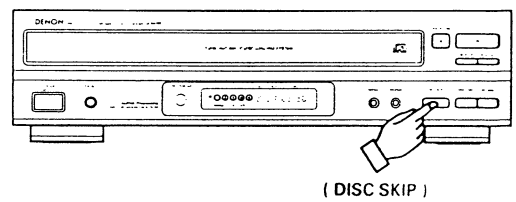

(DISC SKIP)

1. Press the disc skip button. The carousel in the drawer turns and the disc on the next tray is played.
   For example, if disc number 3 was playing, the disc switches to disc number 4, and if disc number 5 was playing, the disc switches to disc number 1.
2. In addition, when the Disc Skip – button on the remote control unit is pressed, the carousel turns in the opposite direction and the previous disc is played.

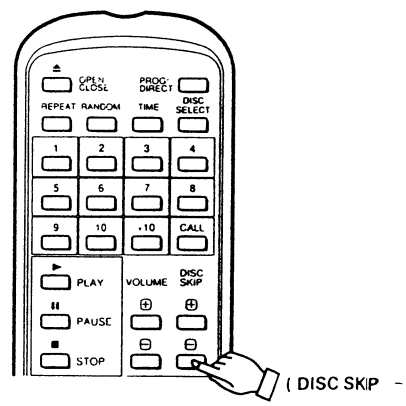

❸ To Move to the Next Track during Play ..... Automatic Search

Press the Automatic/Manual search forward button(▶▶ / ▶▶|) for less than 0.5 seconds during playback.

- The pickup will advance to the beginning of the next track and playback will continue. Pressing the button several times will forward the pickup the corresponding number tracks.

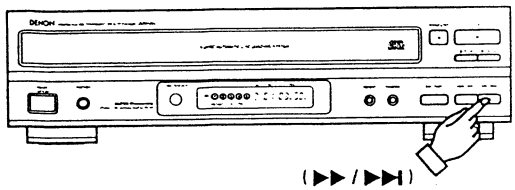

(▶▶ / ▶▶|)

Press the ▶▶ / ▶▶| button

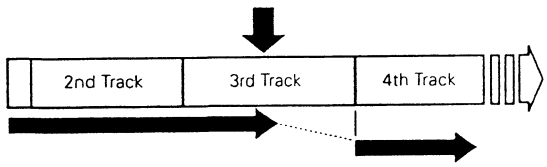

- During Random or Program operation, player moves to the beginning of the next random or program track selection.

❹ To return to the beginning of the track now being played ..... Automatic Search

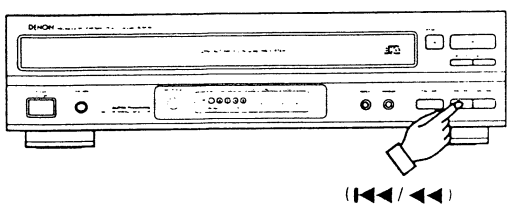

(|◀◀ / ◀◀)

Press the Automatic/Manual search reverse button(|◀◀ / ◀◀) for less than 0.5 seconds during playback.

- The pickup will return to the beginning of the current track and playback will continue. Pressing the button several times will return the pickup the corresponding number tracks.

Press the |◀◀ / ◀◀ button

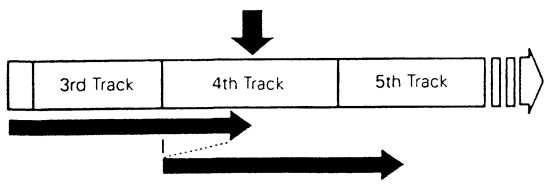

❺ To Play the Desired Discs and the Desired Tracks in the Desired Order ..... Program Selection

(Remote control only)

- You can play certain tracks on the loaded discs in any order.
- Tracks on a disc not loaded can also be programmed, but if you try to play that disc, the microprocessor detects that it is not loaded and the following disc is played automatically.
- Up to 20 tracks can be set in a program.
- A program can be made for a single entire disc.

(1) Programming

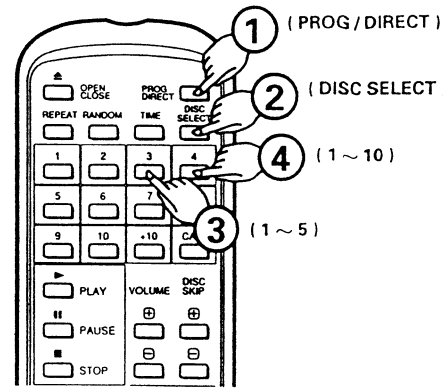

- Press the PROG/DIRECT button. The [PROGRAM] indicator lights. Use the DISC SELECT, number and +10 buttons to select the disc to be programmed.
  For example, to program the 3rd track on the 2nd disc and the 12 track on the 5th disc, press [PROG/DIRECT], [DISC SELECT], [2], [3], [DISC SELECT], [5], [+10] and [2].
  If all the tracks are being selected from the same disc, all the tracks on a particular disc can be played, such as from the 1st track of the 3rd disc, all tracks of the 5th disc and the 5th track of the 5th disc. In this case, press [PROG/DIRECT], [DISC SELECT], [3], [1], [DISC SELECT], [5], [DISC SELECT], [5] and [5].

(2) To Check the Programmed Tracks

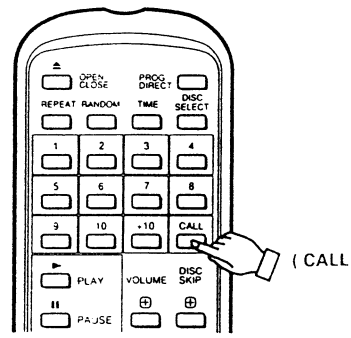

- Press the call button on the wireless remote control unit. The contents of the program are displayed in order one item at a time each time the Call button is pressed.

(3) To Play a Program

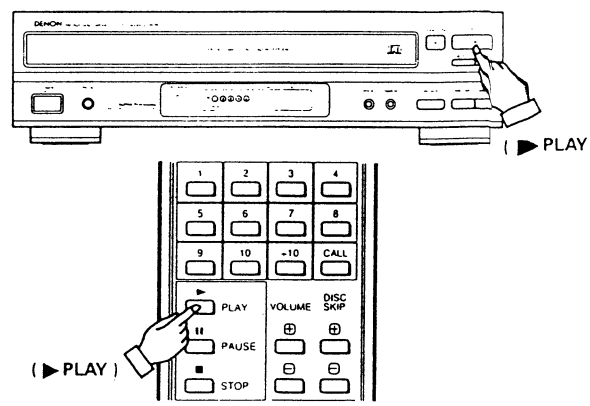

- Press the Play (▶ PLAY) button to play the programmed selections in the order in which they were programmed.

(4) To clear the entire program

- Pressing the PROG/DIRECT button once more erases the entire program. Pressing the open/close (▲ OPEN/CLOSE) button also erases the contents of a program.
- Pressing the PROG/DIRECT button while a program is being played cancels the program. Play will then be continuous to the end of the disc currently being played, after which the player will stop automatically.

Cautions

- If a program is run during playing of a track or from the Pause state, the track which is currently being played becomes the 1st track in the program.
- Additional tracks can be added to the program, but the player will not display the number of tracks in the program or the playing time.
- Direct selection cannot be done while a program is being played. Inputting the track number of a desired track with the Track Number buttons adds the input track to the end of the program.
- When programming, do not program a track number which is not recorded on the disc. If such a number is programmed by mistake, the player ignore the program.

❻ To Repeat Play of All Tracks ..... Repeat Play

- Press the Repeat (REPEAT) button. The [REPEAT] indicator will light up.
- Steps ① and ② can be done in any order, with the same results

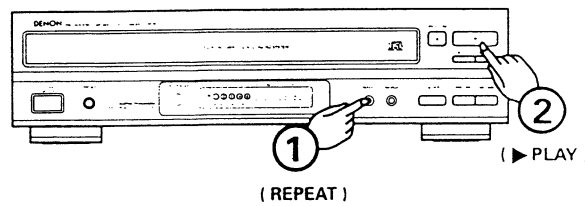

- When the repeat button is pressed once, the [REPEAT] and [1] indicators light. In this mode, the track currently playing is repeated.

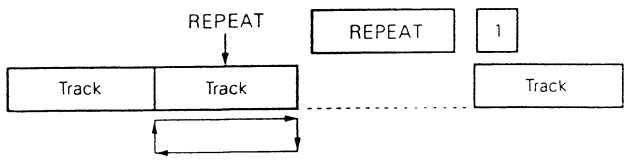

- If the repeat button is pressed again, the [REPEAT] and [1 DISC] indicators light, and the disc currently playing is repeated.

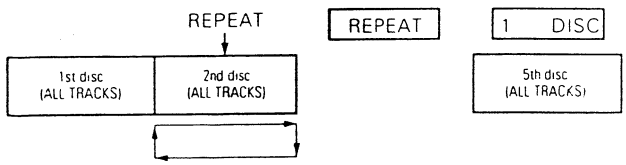

- If the repeat button is pressed again, the [REPEAT] and [ALL DISC] indicators light, and all the discs currently loaded are repeated.

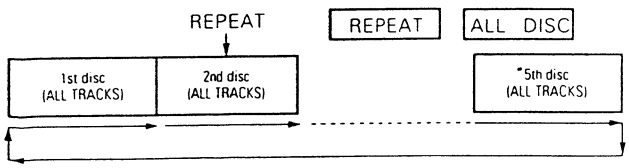

- Pressing the Repeat (REPEAT) button during play will also cause the player to repeat play (of all tracks).
- To cancel repeat play, press the Repeat (REPEAT) button once more
- Pressing the Repeat (REPEAT) button while a program is being played will cause the tracks in the program to be played again in order.
- Pressing the Repeat (REPEAT) button during Random play will cause the tracks to be played again at random.

❼ Letting the Player Select the Order of Play ..... Random Play

(1) Full Random Play

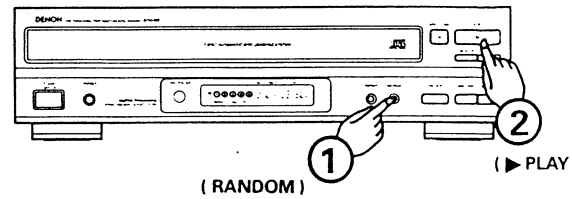

- Press the Random button, then press the Play button. The microcomputer will then start play of the tracks on the 5th disc at random.

(2) Program Random Play (Remote control only)

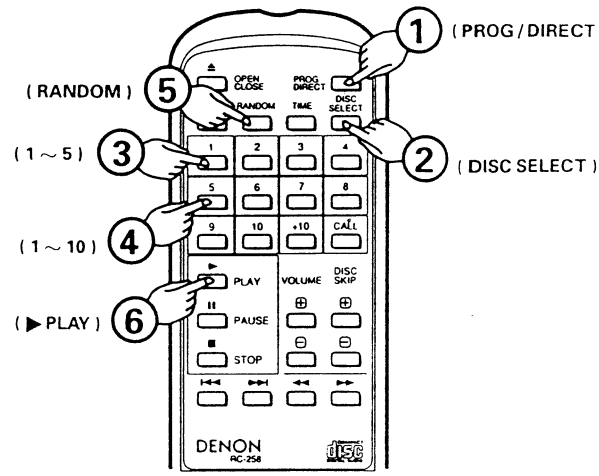

- After pressing the PROG/DIRECT button and inputting a program (See item ❺ on page 10), press the Random button, then the Play button. The microcomputer will then select tracks from the program at random and play them.

(3) Disc Sequential Random Play (Remote control only)

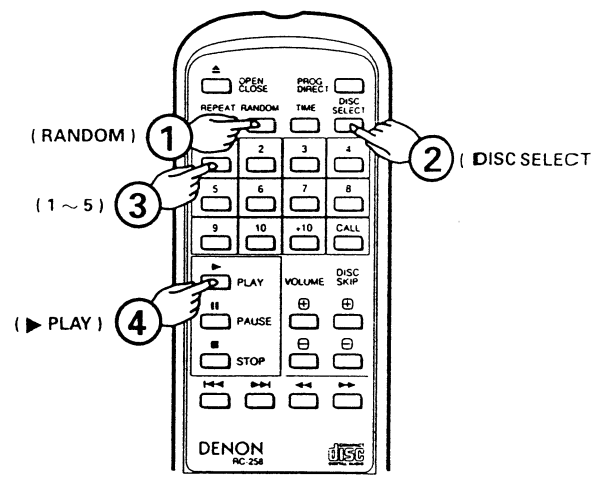

- Press the RANDOM button and specify the disc numbers (1 to 5) with the DISC SELECT button and the number buttons. A press of the PLAY (▶ PLAY) button will result in the player randomly selecting and playing tracks on the disc in the order of specified discs. Up to 5 discs can be selected, and the same disc can be selected two or more times. Disc sequential random play is cancelled when play ends.

(4) To Cancel Random Play

- Pressing the Random button once more cancels the Random function. Play will then proceed from the track currently being played to the end of the last track on the disc, then stop.
  Pressing the open/close (≜ OPEN/CLOSE) button also cancels the Random function.

Cautions

- Pressing the Random button during normal play starts full random play.
- Pressing the Random button during Program play starts random play of the tracks in the program, including the tracks which have already been played.
- During random play, the player may display the number of disc which is not loaded in the tray. In such a case, the player will read the disc information, then reset automatically to correct. This is not a malfunction.

⑧ To Stop Play Temporarily ..... Pause

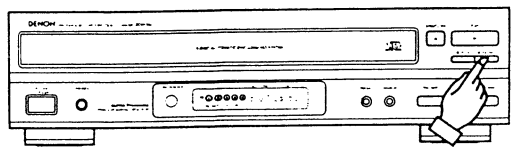

(II PAUSE)

- Pressing the Pause button during play stops play at that point. Pressing the Pause button once more starts play again from the same point.

1. Press the Pause (II PAUSE) button.

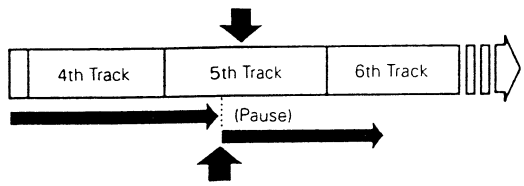

2. Press the Play (▶ PLAY) button or the Pause (II PAUSE) button.

- Press the Play (▶ PLAY) button or the Pause (II PAUSE) button to start play.

⑨ Audible quick search ..... Manual Search

- Using this function, you can cue to a desired point within a track, either in the forward or reverse direction.
- Release the automatic/manual search button (I◀◀ /◀◀ or ▶▶ /▶▶I) when the desired point has been reached. Normal playback then continues.

(1) Manual Search Forward

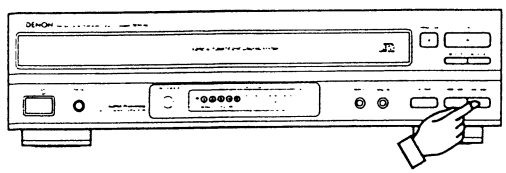

(▶▶ / ▶▶I)

1. Keep on pressing the automatic/manual search forward button (▶▶ / ▶▶I) for more than 0.5 seconds during playback. Playback of the track is sped up.

- As a reference, the current track number and elapsed playback time within the track are displayed.
- Manual search forward is approximately three times faster when engaged during the pause state compared to playback. In this case, no sound is heard however.
- If the automatic/manual search forward button (▶▶ / ▶▶I) is kept pressed after the end of the final track on the disc is reached, ( ]]) is displayed and manual search stops. To return to another point, press the automatic / manual search reverse button (I◀◀ / ◀◀) until ( ]]) disappears.

(2) Manual Search in Reverse

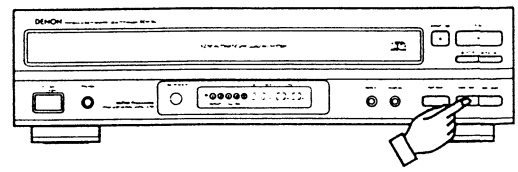

(I◀◀ / ◀◀)

1. Keep on pressing the automatic/manual search reverse button (I◀◀ / ◀◀) for more than 0.5 seconds during playback. Reverse playback of the track is sped up.

- As a reference, the current track number and elapsed playback time within the track are displayed.
- Manual search in reverse is approximately three times faster when engaged during the pause state compared to playback. In this case, no sound is heard however.
- If the automatic/manual search reverse button (I◀◀ / ◀◀) is kept pressed after the beginning of the first track on the disc is reached, ([[ ) is displayed and manual search stops. To return to another point, press the automatic/manual search forward button (▶▶ / ▶▶I) until ([[ ) disappears.

⑩ To Cue and Stop Play ..... Pause

(Remote control only)

(1) Cuing by Direct Selection

- Cuing by direct selection, then entering the Pause state, is convenient for practicing vocals with background music.

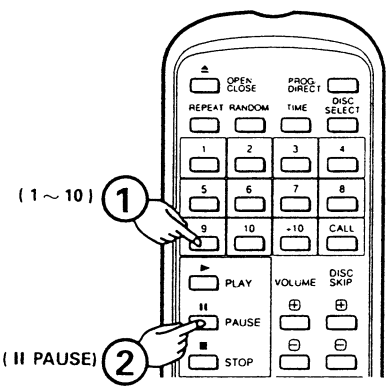

1. Press the Track Number buttons to set the number of the desired track.
2. Press the Pause (II PAUSE) button.

- To start play, press the Play (▶ PLAY) button or the Pause (II PAUSE) button.

(2) Cueing by Program Selection

- After setting the desired track selections in a program, press the Pause (II PAUSE) button. The player will advance to the beginning of the 1st track in program memory and wait in the Pause state.

INSTALLATION PRECAUTIONS

The CD player uses a microcomputer for controlling internal electronic circuits. In the event that the player is used while a near-by tuner or TV is turned on, although unlikely, interference could occur either in the sound from the tuner or the picture of the TV. To avoid this, please take the following precautions.

- Keep the CD player as far away from the tuner or TV set as possible.
- Keep the power cable and connecting cable of the CD player separate from the antenna wires of the tuner and TV.
- Interference is particular likely to occur when an indoor antenna or a 300 Ω/ohms feeder cable is used. Thus, use of an outdoor antenna and 75 Ω/ohms coaxial cable is strongly recommended.

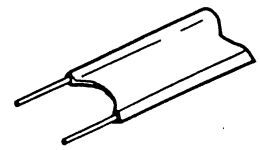

300 Ω/ohms feeder cable

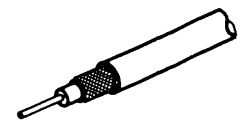

75 Ω/ohms coaxial cable

PLAY USING THE REMOTE CONTROL UNIT

The DCM-360/260 CD Player can be controlled from across the room using the accessory Remote Control Unit.

(1) Inserting the Dry Battery

1. Remove the cover on the back of the remote control unit.

RC-258

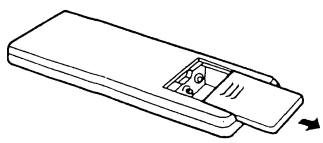

2. Insert two R6P (AA size) batteries in the RC-258, following the indications on the battery compartment.

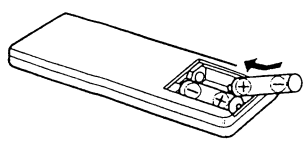

3. Replace the cover on the back of the remote control unit.

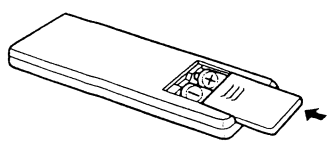

Cautions Concerning Dry Batteries

- Use R6P batteries in the RC-258 remote control unit.
- Depending on the frequency of use, the dry batteries should be replaced approximately once per year.
- If the remote control unit fails to control the CD Player, even before a year has passed, replace the dry batteries with new ones.
- Be sure to follow polarity indications inside the case of the remote control unit, inserting the + end and − end of each battery in the directions indicated.
- Batteries may become damaged or leak under the following conditions.
  - Using new batteries together with old ones.
  - Using different types of batteries together.
  - Do not short batteries, take them apart, subject them to heat or throw them into a fire.
- When the remote control unit is not used for a long period of time, remove the dry batteries.
- If fluid leaks from the batteries, be sure to wipe up all battery fluid inside the battery case and replace the batteries with new ones.

(2) Using the Remote Control Unit

- Aim the remote control unit toward the light receptor in the front of the CD Player, as shown in the drawing below.
- The remote control unit can be used up to a distance of 8 meters in a straight line from the CD Player. However, this distance will be shortened if there is some obstruction between the remote control unit and the light receptor, or if the beam of light is slanted.

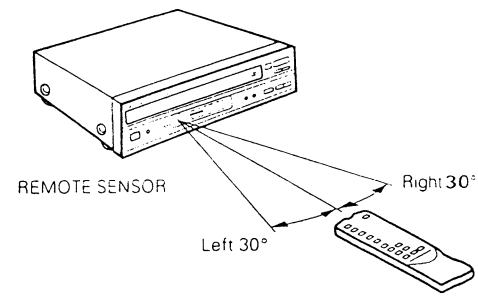

- The remote control unit has the same functions as the main unit, but the following operations cannot be done.
  - Switching the power on and off.

Cautions During Use

- Do not press the operating buttons on the main unit and the remote control unit at the same time. This could cause a malfunction.
- Operation of the remote control unit will be hindered if a strong light from the sun or a light fixture is shining on the REMOTE SENSOR, or if there is an obstruction between the remote control unit and the CD player unit.

REMOTE CONTROL UNIT RC-258

Setting to the Program Mode
- For program search, press the PROG/DIRECT button then the track number buttons (1 through 10 and +10).
- The remote control unit is normally set to the direct mode.

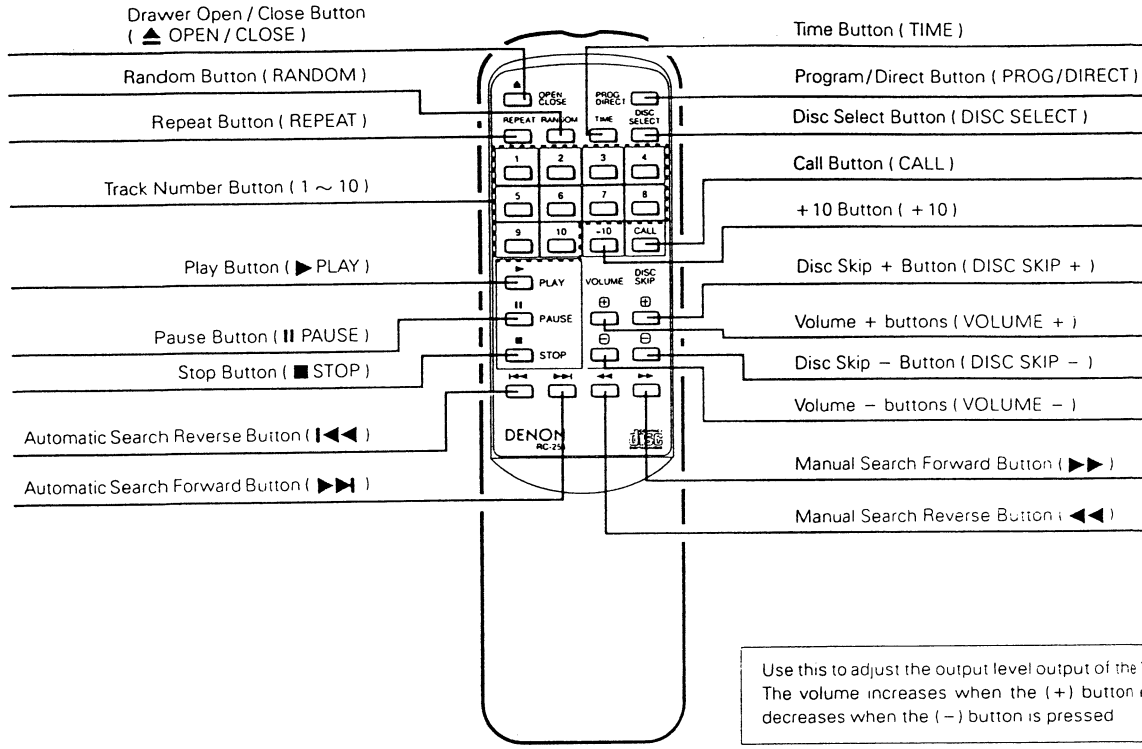
Drawer Open / Close Button (▲ OPEN / CLOSE)
Random Button (RANDOM)
Repeat Button (REPEAT)
Track Number Button (1 ~ 10)
Play Button (▶ PLAY)
Pause Button (II PAUSE)
Stop Button (■ STOP)
Automatic Search Reverse Button (I◀◀)
Automatic Search Forward Button (▶▶I)
Time Button (TIME)
Program/Direct Button (PROG/DIRECT)
Disc Select Button (DISC SELECT)
Call Button (CALL)
+10 Button (+10)
Disc Skip + Button (DISC SKIP +)
Volume + buttons (VOLUME +)
Disc Skip − Button (DISC SKIP −)
Volume − buttons (VOLUME −)
Manual Search Forward Button (▶▶)
Manual Search Reverse Button (◀◀)
OPEN CLOSE
PROG DIRECT
REPEAT
RANDOM
TIME
DISC SELECT
+10
CALL
PLAY
PAUSE
STOP
VOLUME
DISC SKIP
DENON
RC-258

Use this to adjust the output level output of the VARIABLE. The volume increases when the (+) button is pressed. decreases when the (−) button is pressed

- **Disc Selection**
  Use the DISC SELECT and number buttons to select the number of the disc to be played.
  " − " appears on the disc number section of the display for 2 seconds when the DISC SELECT button is pressed. Press the number button corresponding to the number of the disc to be played while " − " is displayed to select the disc number.
  Track numbers are selected if the number buttons are pressed while " − " is not displayed on the disc number section of the display.
- **Direct Selection**
  Normally, direct search is possible simply by pressing the desired number buttons.
- **Program Selection (During playback, the track which is currently playing is programmed as the 1st track.)**
  Press the PROG/DIRECT button, then press the number buttons.
  For example, to program tracks number 3, 11, and 5 press PROG / DIRECT → 3 → +10 and 1 → 5.
  To cancel the program, press the PROG/DIRECT button
- **Inputting the Track Numbers**
  For track numbers below 10, simply press the corresponding button. For track numbers of 11 and greater, press the +10 then the number buttons.
  For example, for track number 22 press +10 twice then 2
- **Volume**
  The volume control on the unit will operate when the volume buttons are pressed. The volume can be checked by looking at the position of the control.

- **Skipping Discs**
  The Disc Skip button (DISC SKIP +, −) will not function in the random and program modes.
  During disc sequential random playback, when the Disc Skip + button is pressed, the following disc is played in random order.
- **Volume**
  The output level of the VARIABLE output terminal can be changed.
  When the volume button is pressed, " − " appears in the TIME M (minutes) section of the display window and the level appears in the S (seconds) section. The volume can be changed between a maximum of " − 00" and a minimum of " − 12" in 12 steps, by approximately 1.5 dB per step.

- The Time indicator indicates the amount of elapsed time for the track currently being played, the amount of time remaining for the current track and the amount of time remaining for all tracks yet to be played.
  Normally, the amount of elapsed time for the current track is displayed. Pressing this button once causes the [SINGLE] indicator to light up, displaying the amount of time remaining for the current track. Pressing the button once more turns the [SINGLE] indicator off and causes the [TOTAL] indicator to light up, displaying the time remaining for all tracks yet to be played on the disc. Pressing the button once again turns the [TOTAL] indicator off and causes the indicator to display the elapsed time for the current track.
- During playback, the total remaining time is the remaining time for the disc. For programmed playback, the remaining time for the program is only displayed when the programmed tracks are all on the same disc.
  In the case of 21st and subsequent tracks, the time remaining for one track is displayed "----". When 21st and subsequent tracks is programmed, the time remaining for all tracks is displayed "----".
  "----" is displayed when tracks on more than one disc are programmed.

COMPACT DISCS

1. **Cautions in Handling Compact Discs**
   - Do not get fingerprints, oil, dirt or other substances on the compact disc. If the disc becomes dirty, wipe it off with a dry, soft cloth. DENON AMC-20/21 CD Cleaner is recommended.
   - Do not clean compact discs with benzene, paint thinner, water, record spray, anti-static agent, silicon cloth or similar substances.
   - Take particular care to prevent scratches to the back side of the compact disc when removing it from the case and when inserting it in its case.
   - Do not bend compact discs.
   - Do not apply to compact discs.
   - Do not attempt to enlarge the center hole of the disc.
   - Do not write on the label (printed) side of the disc with a ball point pen or pencil.
   - Bringing a CD into a warm room from a cold place could cause moisture to condense on the disc surface. Do not attempt to dry the disc with a hair dryer, etc.

2. **Storage of Compact Discs**
   - After play, be sure to remove the disc from the player.
   - To prevent dust, scratches, deformation, etc., be sure to store compact discs in their case.
   - Do not store compact discs in the following locations.
     1. Places where direct sunlight strikes for long periods of time.
     2. Places with a high humidity or a lot of dust.
     3. Places reached by heat from a heater or similar appliance.

TROUBLE? CHECK THE PLAYER TO FIND WHAT'S WRONG

Even when it appears that there is trouble, check the following points carefully.

The drawer won't open / close when the Open / Close button is pressed.
- Is the Power switch on?

After a disc is loaded (0 00 00_M 00_S) is displayed in the display window.
- Is the disc loaded correctly? ..... See page 7, 9, 15.

Play does not begin when the Play button is pressed.
- Is the disc dirty or scratched? ..... See page 15.

There is no sound, or the sound is distorted.
- Is the output cord connected correctly to the amplifier? ..... See page 8.
- Does the sound return to normal when the amplifier's knobs are adjusted or the proper input device is selected?

The player won't go to the place specified in the search.
- Is the disc dirty or scratched? ..... See page 15.

A program cannot be played.
- Is the method used to make a program and run it correct? ..... See page 10.

The player won't operate correctly when the remote control unit is used.
- Are the dry batteries in the remote control unit dead? ..... See page 13.
- Is the remote control unit located too far from the CD Player unit? ..... See page 13.

SPECIFICATIONS

AUDIO	DCM-360	DCM-260
Number of Channels	2 Channels	
Frequency Characteristics	2 ~ 20,000 Hz	
Dynamic Range	99 dB	98 dB
S N Ratio	108 dB	108 dB
High Frequency Distortion	0.0025% (1kHz)	0.0028%
Separation	98 dB	98 dB
Wow and Flutter	Less than the measuring (+0.001% W. peak)	
Output Voltage	Variable 0.2 ~ 2.0 V	
DISC USED	Audio compact discs are used 12 cm (5 in) and 8 cm (3 in)	
OVERALL		
Power Supply	50 Hz, Voltage is shown on rating label	
Power Consumption	11 W	
External Dimensions	434 (W) × 114 (H) × 398 (D) mm (17-3/32" × 4-17/32" × 15-11/16")	
Weight	5.4 kg (11.9 lbs.)	5.4 kg (11.9 lbs)

FUNCTIONS AND DISPLAY	
Functions	Five discs can be used, Direct Track Selection, Program Selection, Random Play, etc.
Displays	Disc No., Track No., Time (min., sec.), Play, Pause, Repeat, Random, etc.
Other	Headphone Jack Level Variable
REMOTE CONTROL UNIT RC-258	
Remote Control Method	Infrared Pulse system
Power Supply	3 V DC Two R6P (standard SIZE AA)
External Dimensions	50 (W) × 175 (H) × 18 (D) mm (1-31/32" × 6-57/64" × 45/64")
Weight	100g (approx. 3 oz) (Includes batteries)

* Design and specifications are subject to change without notice in the course of product improvement.

NIPPON COLUMBIA CO., LTD.

14-14, AKASAKA 4-CHOME, MINATO-KU, TOKYO 107-11, JAPAN
Telephone: (03) 3584-8111
Cable: NIPPON COLUMBIA TOKYO Telex: JAPANOLA J22591

Printed in Hong Kong 511 2897 009 ℗ 511